

... for more than 40 years +

All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •
Copying and distribution of the drawings as well as any other use require our written consent. •



KRASO GMBH & CO. KG
Baumannweg 1 | DE-46414 Rhede
T +49 (0) 28 72 - 95 35 - 0
info@kraso.de | **KRASO.de**

6.4-MA.EN-v1.0-07.26-RSc.DK


KRASO®

SIMPLE + TIGHT



KRASO® Sealing Insert Type FBV/GF

Installation instructions

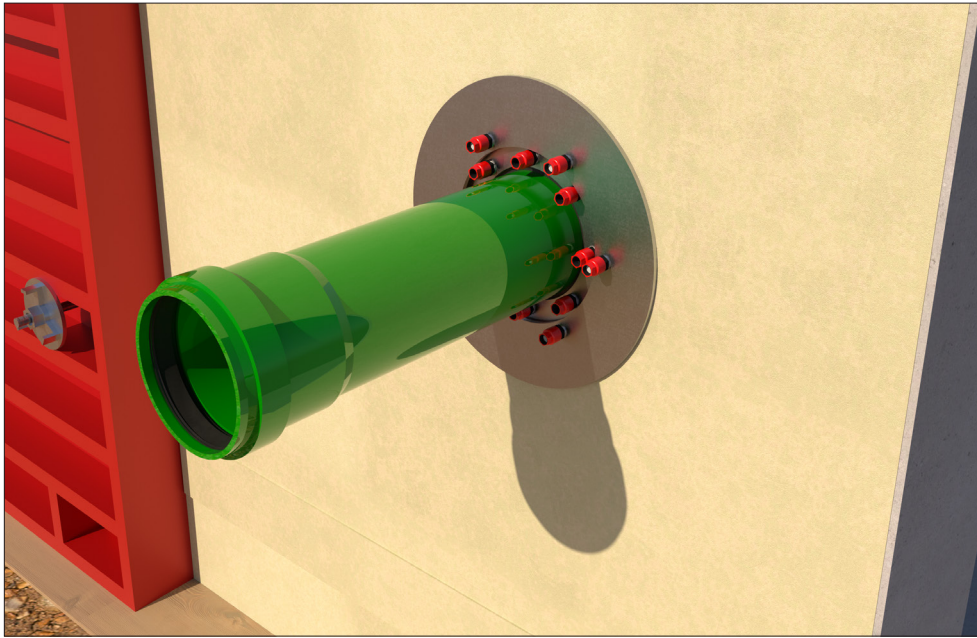

KRASO® Sealing Insert Type FBV/GF

For installation of pipe or cables, for casing or core drilling, with large flange and additional sealing flange incl. butyl sealing band for the integration of FBV films, **Torque Control Nut KRASO® DKM**, non-corrosive stainless steel V2A, against pressing water up to 2.5 bar

| DafStB waterproof concrete guideline: stress class 1 + 2

1. Mark the position for the core drilling on the FBV film.
2. Make a core drilling. Clean the core drilling.
If necessary, treat the core drilling with **KRASO® Core Drilling Sealant**.
3. Remove the protective film from the butyl sealing strip.
4. Insert the **KRASO® Sealing Insert Type FBV/GF** into the core drilling.
5. Insert the media line into the **KRASO® Sealing Insert Type FBV/GF**.
6. Fitting the internal Torque Control Nuts **KRASO® DKM**:
Tighten the Torque Control Nuts **KRASO® DKM** crosswise step by step.
Tighten the Torque Control Nuts **KRASO® DKM** until it audibly "**CLICKS**".
7. Fitting the external Torque Control Nuts **KRASO® DKM**:
Tighten the Torque Control Nuts **KRASO® DKM** crosswise step by step.
Tighten the Torque Control Nuts **KRASO® DKM** until it audibly "**CLICKS**".
8. The minimum gap between the **KRASO® Sealing Insert Type FBV/GF** and the FBV membrane is determined by the product design. Due to its material properties, the butyl membrane between the two cannot be fully compressed to zero, resulting in a small gap remaining between the stainless steel and the FBV membrane.

