

... for more than 40 years +

All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •
Reproduction and distribution of the drawings as well as any other use require our written consent. •





KRASO GMBH & CO. KG
Baumannweg 1 | DE-46414 Rhede
T +49 (0) 28 72 - 95 35 - 0
info@kraso.de | **KRASO.de**

4.18-MA.EN-v1.0-07.26-RSc.DK


KRASO®

SIMPLE + TIGHT

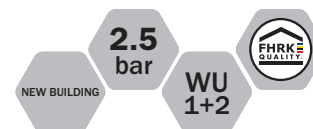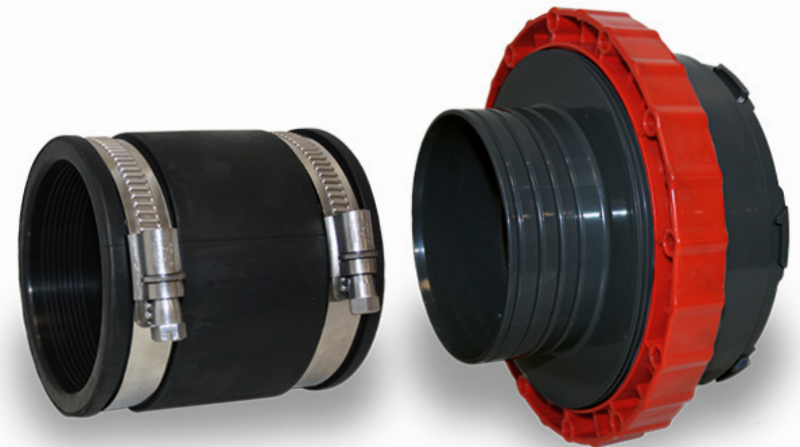

KRASO®

System Cover KDS 150 with hose adapter
Installation instructions

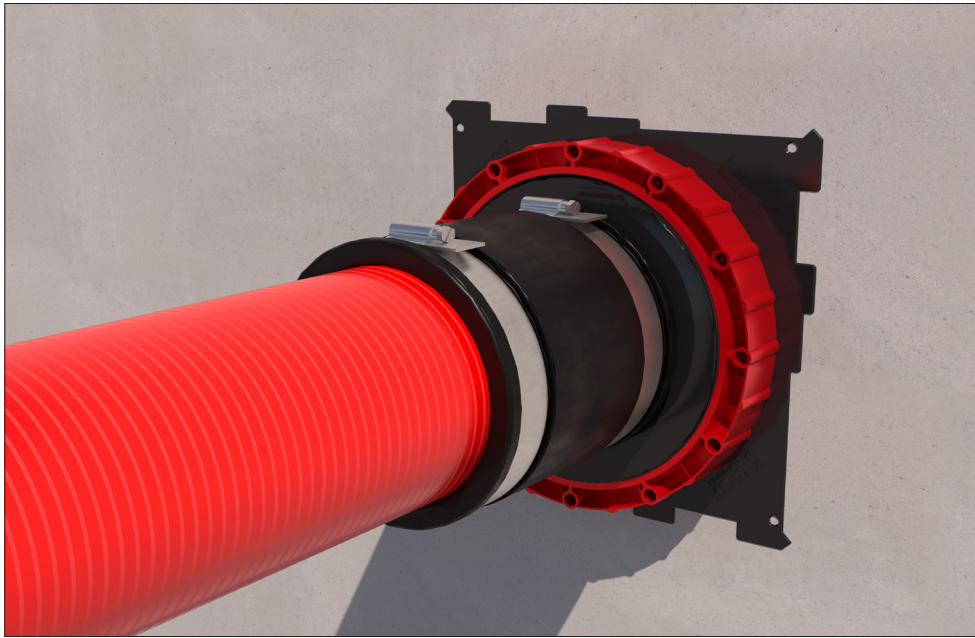

KRASO® System Cover KDS 150 with hose adapter

Incl. bayonet fitting with union nut and anti-twist lock, hose adapter for the connection of **KRASO®** FLS, PE corrugated pipes or PVC and PP pipes to **KRASO®** Cable Penetration KDS 150. In combination with **KRASO®** FLS water pressure tight up to 2.5 bar.

| DafStB waterproof concrete guideline: stress class 1 + 2

1. Remove the sticker of the **KRASO®** Cable Penetration KDS 150.
2. Use the **KRASO®** Y-Wrench to open the KDS 150 closure cover in the direction of the arrow.
3. Clean the **KRASO®** Cable Penetration KDS 150 including the bayonet fitting.
4. Screw the **KRASO®** System Cover KDS 150 with hose adapter firmly into the bayonet fitting.
5. Tighten the red union nut of the **KRASO®** System Cover KDS 150 with hose adapter in the direction of the arrow until it is fully seated on the frame.
6. Insert the **KRASO®** FLS - Flexible Empty Pipe System into the hose adapter until it reaches the middle.
7. Tighten the metal bands using a socket wrench (size 13) with a torque of 7 Nm.

