

... for more than 40 years +

KRASO®

SIMPLE + TIGHT



All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •
Reproduction and distribution of the drawings as well as any other use require our written consent. •




KRASO GMBH & CO. KG
Baumannweg 1 | DE-46414 Rhede
T +49 (0) 28 72 - 95 35 - 0
info@kraso.de | **KRASO.de**

4.19-MA.EN-v1.0-07.26-RSc.DK



KRASO®

System Cover KDS 150 with sleeve
Installation instructions

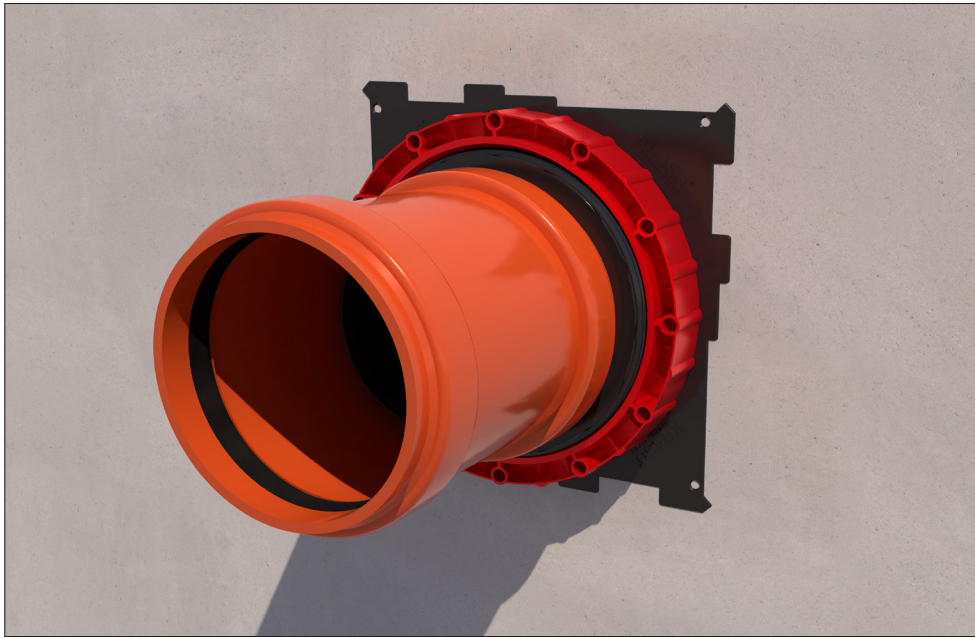

KRASO® System Cover KDS 150 with sleeve

Incl. bayonet fitting with unit nut and anti-twist lock, sleeve for the connection of PVC and PP pipes to **KRASO®** Cable Penetration KDS 150

1. Remove the sticker of the **KRASO®** Cable Penetration KDS 150.
2. Use the **KRASO®** Y-Wrench to open the KDS 150 closure cover in the direction of the arrow.
3. Clean the **KRASO®** Cable Penetration KDS 150 including the bayonet fitting.
4. Screw the **KRASO®** System Cover KDS 150 with sleeve firmly into the bayonet fitting.
5. Tighten the red union nut of the **KRASO®** System Cover KDS 150 with sleeve in the direction of the arrow until it is fully seated on the frame.

