

... for more than 40 years +

All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •
Reproduction and distribution of the drawings as well as any other use require our written consent. •




KRASO GMBH & CO. KG
Baumannweg 1 | DE-46414 Rhede
T +49(0) 28 72 - 95 35 - 0
info@kraso.de | **KRASO.de**


5.2.1-MA.EN-v.1.0-07.25-RSc.DK

KRASO®

SIMPLE + TIGHT

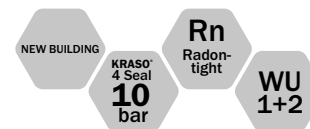

KRASO® Floor Penetration Type BDF
for KG 2000
Installation instructions

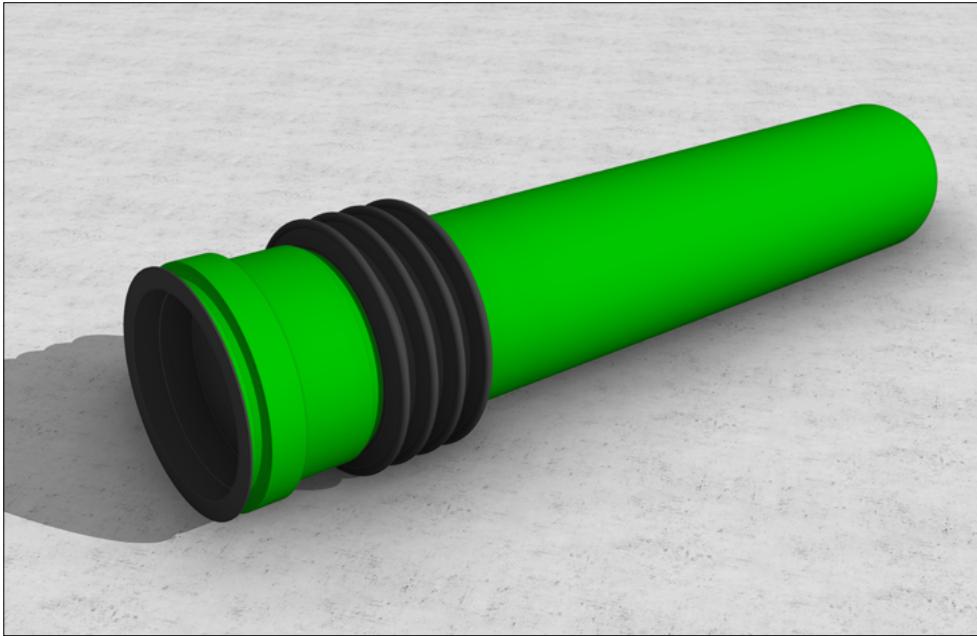

KRASO® Floor Penetration Type BDF for KG 2000

For the connection to system KG 2000 lines

| DafStB waterproof concrete guideline: stress class 1 + 2

1. Shorten **KRASO®** Floor Penetration Type BDF for KG 2000 to the required length and chamfer the cut.
2. Apply lubricant to the **KRASO®** Floor Penetration Type BDF for KG 2000 and insert into the main pipe. TEUF = top edge unfinished floor.
3. Insert support cages and upper reinforcement.
4. Concrete base plate.
5. Remove **KRASO®** Cover.
6. Clean the lip ring (if necessary).

