

... for more than 40 years +

All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •
Reproduction and distribution of the drawings as well as any other use require our written consent. •




KRASO GMBH & CO. KG
Baumannweg 1 | DE-46414 Rhede
T +49(0) 28 72 - 95 35 - 0
info@kraso.de | **KRASO.de**

5.2.2-MA.EN-v1.0-08.25-RSc.DK

KRASO®


SIMPLE + TIGHT

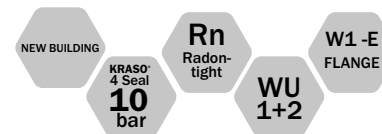

KRASO® Floor Penetration Type BDF

for KG 2000 with foil flange

Installation instructions

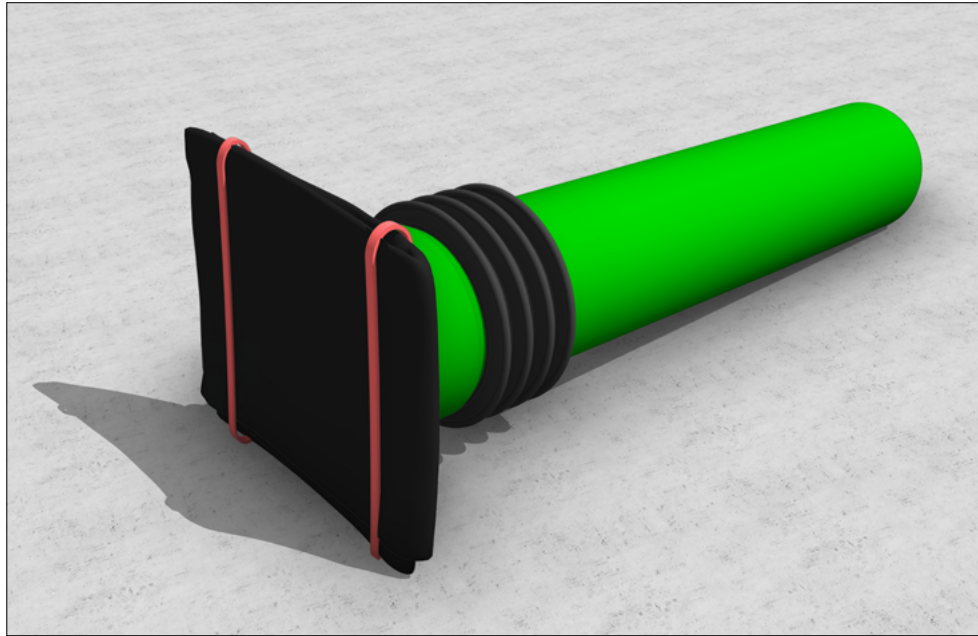

KRASO® Floor Penetration Type BDF for KG 2000 with foil flange

For the connection to system KG 2000 lines, with **KRASO® Foil Flange**, oil- and bitumen resistant, surrounding approx. 15 cm. For the integration of the foil flange we recommend our adhesive and sealant **KRASO® PU 50**

| DafStB waterproof concrete guideline: stress class 1 + 2, DIN 18533 W1-E

1. Shorten **KRASO®** Floor Penetration Type BDF for KG 2000 with foil flange to the required length and chamfer the cut. Length = base plate thickness + insertion depth
2. Apply lubricant to the **KRASO®** Floor Penetration Type BDF for KG 2000 with foil flange and insert into the main pipe.
3. Insert support cages and upper reinforcement. TEUF = top edge unfinished floor.
4. Concrete base plate. Remove concrete slurry. Remove dust.
5. Spread out the foil flange and mark the contour.
6. Apply **KRASO®** PU 50.
7. Spread **KRASO®** PU 50 in a circle around the pipe.
8. Spread out the foil flange and press on with your hand. Then press on evenly from the inside to the outside using the pressure roller and leave to harden for 24 hours.
9. Apply the sealing sheet according to the manufacturer's instructions.

* If it is not possible to maintain a distance of 100 mm due to the on-site conditions, consult with the installer of the sealing of larger areas to determine whether the sealing sheet can also be professionally installed with a smaller distance.

