

... for more than 40 years +

All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •
Reproduction and distribution of the drawings as well as any other use require our written consent. •




KRASO GMBH & CO. KG
Baumannweg 1 | DE-46414 Rhede
T +49 (0) 28 72 - 95 35 - 0
info@kraso.de | **KRASO.de**


5.20-MA.EN-v1.0-06.26-RSc.DK

KRASO®

SIMPLE + TIGHT

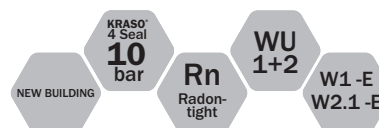

KRASO® Wall Penetration Type B/SF 5
for KG 2000
Installation instructions

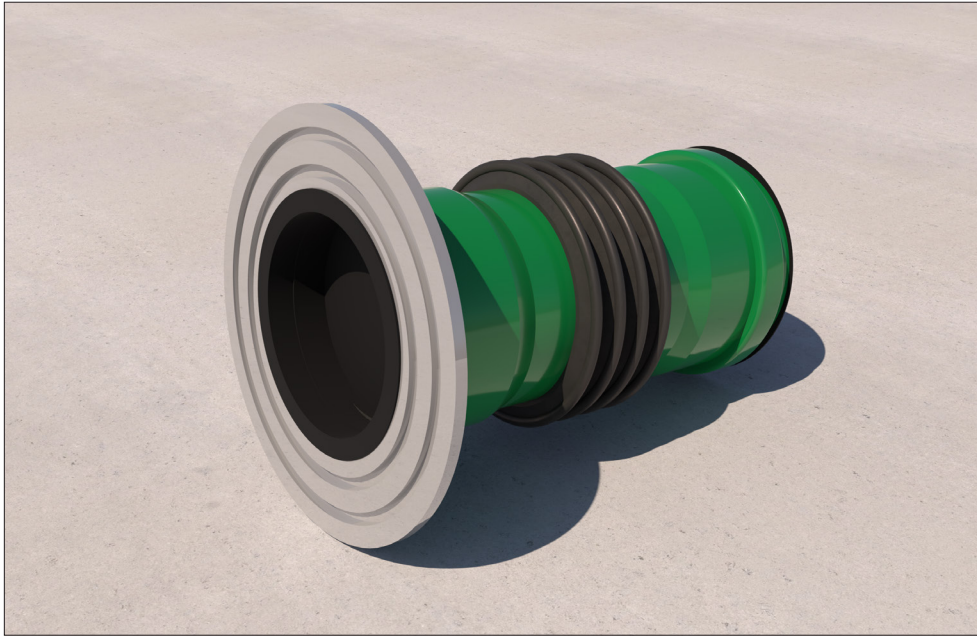

KRASO® Wall Penetration Type B/SF 5 for KG 2000

For installation in waterproof concrete walls for connection to KG 2000 pipes on both sides, with trowel flange on one side with dovetail groove for the secure connection of bitumen thick coating and reactive sealings, formed plug-in sleeves on both sides, 2 **KRASO® Covers** as an installation aid
 | DafStB waterproof concrete guideline: stress class 1 + 2, DIN 18533 W1 -E and W2.1 -E

Installation example:

KRASO® Wall Penetration Type B/SF 5 for KG 2000 -

trowel flange with dovetail groove facing the outside of the building.

1. Nail on the **KRASO®** Cover using a hammer.
2. Lay the reinforcement. Make sure the concrete covers the area of the penetration.
3. Place the **KRASO®** Wall Penetration Type B/SF 5 for KG 2000 on the **KRASO®** Cover.
If necessary: fix the **KRASO®** Wall Penetration Type B/SF 5 for KG 2000 to the reinforcement.
Important: the wire must not be fixed to the **KRASO®** 4 Seal.
4. Formwork and ensure sufficient distance to the tie points.
Lay the reinforcement. Make sure the concrete covers the area of the penetration.
5. Concrete wall.
6. To avoid segregation in the area of the penetration, the free fall height of the concrete must not exceed 1 m.
7. Remove formwork. Clean the trowel flange with dovetail groove. Apply area sealing according to manufacturer's instructions.

