


... for more than 40 years +

**KRASO**<sup>®</sup>  
SIMPLE + TIGHT

All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •  
Reproduction and distribution of the drawings as well as any other use require our written consent. •

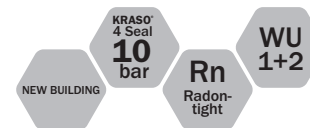


## KRASO<sup>®</sup> Floor Drain Type FS - frost proof Installation instructions



**KRASO GMBH & CO. KG**  
Baumannweg 1 | DE-46414 Rhede  
T +49 (0) 28 72 - 95 35 - 0  
info@kraso.de | **KRASO.de**

5.41.1-MA.EN-v1.0-09.25-RSc.DK

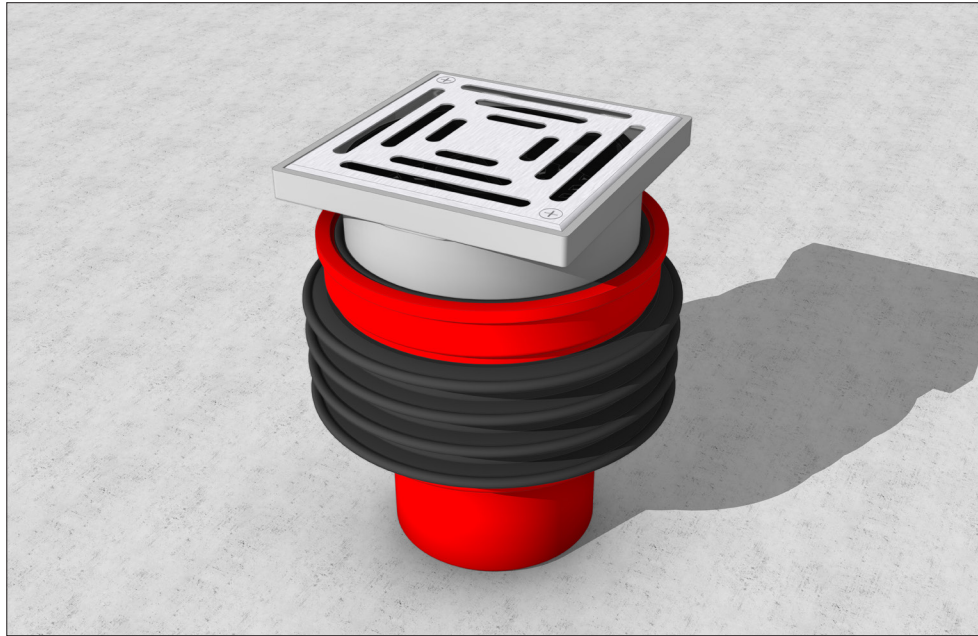

## KRASO® Floor Drain Type FS - frost proof

For the installation in exterior areas without traffic, for the drainage of grey water, drainage capacity: 1.67 l/s, with water pressure tight surrounding **KRASO® 4 Seal**.

| DafStB waterproof concrete guideline: stress class 1 + 2

1. Apply lubricant to the **KRASO®** Floor Drain Type FS and insert into the main pipe.
2. Insert **KRASO®** Cover as building period protective cover.
3. Insert support cages and upper reinforcement. TEUF = top edge unfinished floor.
4. Concrete base plate.
5. Remove the **KRASO®** Cover, clean the lip ring (if necessary).
6. Apply lubricant to insert frame and lip ring and plug them together.
7. Insert the insert frame extension (at floor level > 7 cm) with attached insert frame into **KRASO®** Floor Drain Type FS. TEFF = top edge finished floor
8. (If necessary,) remove insert frame extension, shorten to the required length, sharpen and re-insert.
9. Align the insert frame in the desired position.
10. Construction of the floor.
11. Install sludge trap filter and stainless steel grate in the insert frame.
12. Screw stainless steel grate in place.

