

... for more than 40 years +

All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •
Reproduction and distribution of the drawings as well as any other use require our written consent. •




KRASO GMBH & CO. KG
Baumannweg 1 | DE-46414 Rhede
T +49(0) 28 72 - 95 35 - 0
info@kraso.de | **KRASO.de**


5.42.2-MA.EN-v1.0-09.25-RSc.DK

KRASO®

SIMPLE + TIGHT

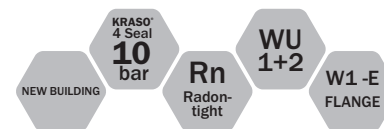

KRASO® Floor Drain Type FS - frost proof
for KG 2000 with foil flange
Installation instructions



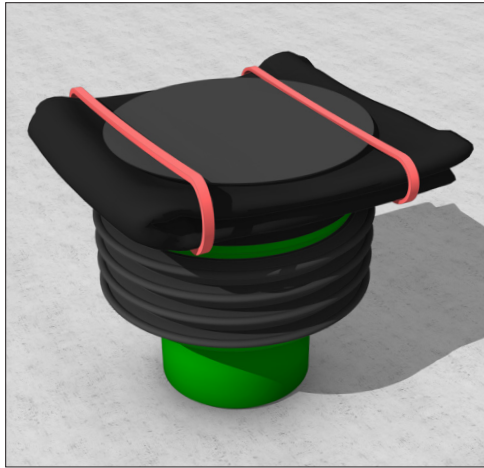


KRASO® Floor Drain Type FS - frost proof for KG 2000 with foil flange

According to DIN EN 1253 – for the installation in exterior areas without traffic, for the drainage of grey water, drainage capacity: 1.67 l/s, with water pressure tight surrounding thermally welded **KRASO® 4 Seal**. With **KRASO® Foil Flange**, oil- and bitumen resistant (d = approx. 50 cm). For the integration of the foil flange we recommend our adhesive and sealant **KRASO® PU 50**

|DafStB waterproof concrete guideline: stress class 1 + 2, with foil flange DIN 18533 W1 -E

1. Apply lubricant to the **KRASO®** Floor Drain Type FS and insert into the main pipe.
2. Insert support cages and upper reinforcement. TEUF = top edge unfinished floor.
3. Concrete base plate. Remove concrete slurry. Remove dust.
4. Remove the **KRASO®** Cover, spread out the foil flange and mark the outline. Apply **KRASO® PU 50**.
5. Fold up the foil flange, spread **KRASO® PU 50** in a circle around the floor drain.
6. Spread out the foil flange and press on with your hands. Then press on evenly from the inside to the outside using the pressure roller and leave to harden for 24 hours.
7. Insert the **KRASO®** Cover. Apply the sealing sheet according to the manufacturer's instructions.
8. **Remove the KRASO®** Cover, clean the lip ring (if necessary).
9. Apply lubricant to insert frame and lip ring and plug them together.
10. Insert the insert frame extension (at floor level > 7 cm) with attached insert frame into **KRASO®** Floor Drain Type FS. TEFF = top edge finished floor.
11. (If necessary,) remove insert frame extension, shorten to the required length, sharpen and reinsert.
12. Align the insert frame in the desired position.
13. Construction of the floor.
Place the sludge trap filter and stainless steel grate in the insert frame and screw them in place.

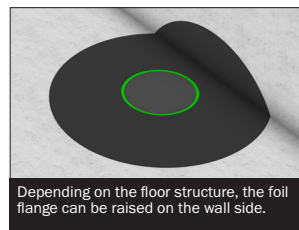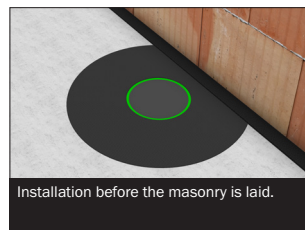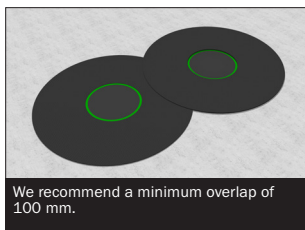

*If it is not possible to maintain a distance of 100 mm due to the on-site conditions, consult with the installer of the sealing of larger areas to determine whether the sealing sheet can also be professionally installed with a smaller distance.

