


... for more than 40 years +

# KRASO®

SIMPLE + TIGHT

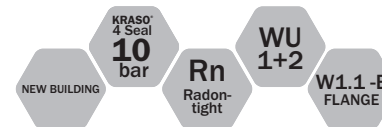

## KRASO® Yard-/Parking Level Drain Type 1.5 Installation instructions

All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •  
Reproduction and distribution of the drawings as well as any other use require our written consent. •



**KRASO GMBH & CO. KG**  
Baumannweg 1 | DE-46414 Rhede  
T +49(0)28 72 - 95 35 - 0  
info@kraso.de | **KRASO.de**

5.48.1-MA.EN-v1.0-04.26-RSc.DK



## KRASO® Yard-/Parking Level Drain Type 1.5

For installation in areas with traffic

1. Apply lubricant to the **KRASO®** Yard-/Parking Level Drain Type 1.5 and insert it into the main pipe.
  2. Remove sand trap basket, key and slot grate.
  3. Protect the **KRASO®** Yard-/Parking Level Drain Type 1.5 from contamination on site.
  4. Insert support cages and reinforcement. OKFF = top edge finished floor.
  5. Concrete base plate.
- Remove the building period protection cover installed on-site.
6. If the top edge of the concrete does not match the top edge of the finished floor (OKFF), a corresponding insert frame extension must be used (see detail).
  7. Insert the sand trap basket and slot grate.

