

... for more than 40 years +

KRASO®

SIMPLE + TIGHT



All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •
Reproduction and distribution of the drawings as well as any other use require our written consent. •




KRASO® Yard-/Parking Level Drain Type 12.5 Installation instructions



KRASO GMBH & CO. KG
Baumannweg 1 | DE-46414 Rhede
T +49(0)28 72 - 95 35 - 0
info@kraso.de | **KRASO.de**

5.48.5-MA.EN-v1.0-02.26-RSc.DK

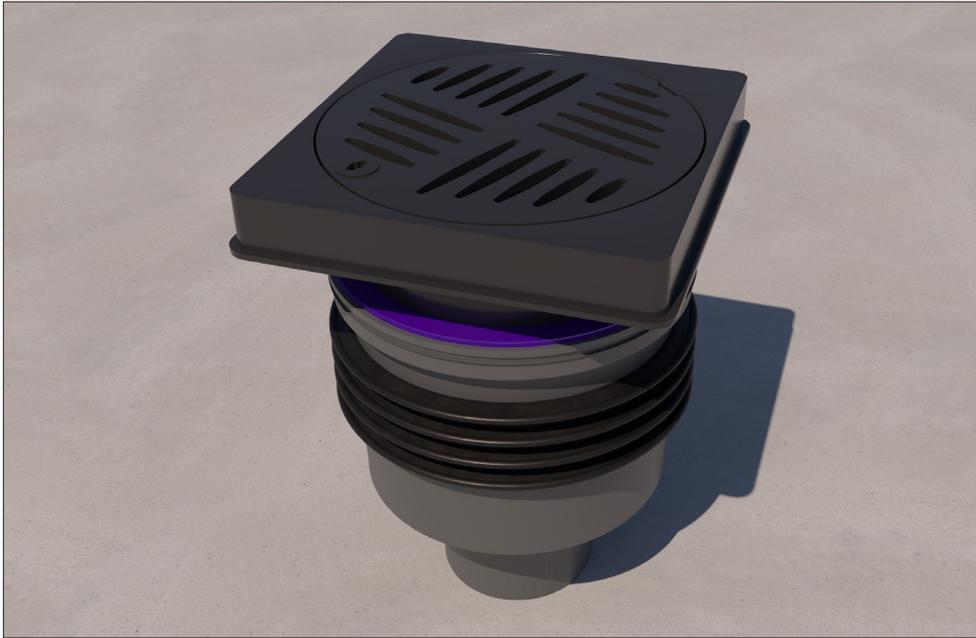

KRASO® Yard-/Parking Level Drain Type 12.5

For installation in areas with traffic

1. Apply lubricant to the **KRASO®** Yard-/Parking Level Drain Type 12.5 and insert it into the main pipe.
 2. Remove sand trap basket, key and slot grate.
 3. Protect the **KRASO®** Yard-/Parking Level Drain Type 12.5 from contamination on site.
 4. Insert support cages and reinforcement. TEFF = top edge finished floor.
 5. Concrete base plate.
- Remove the building period protection cover installed on-site.
6. If the top edge of the concrete does not match the top edge of the finished floor (TEFF), a corresponding insert frame extension must be used (see detail).
 7. Insert the sand trap basket and slot grate.

If necessary: lock the slotted grate.

