

... for more than 40 years +

All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •
Reproduction and distribution of the drawings as well as any other use require our written consent. •




KRASO GMBH & CO. KG
Baumannweg 1 | DE-46414 Rhede
T +49(0) 28 72 - 95 35 - 0
info@kraso.de | **KRASO.de**

5.6-MA.EN-v1.0-08.25-RSc.DK


KRASO®

SIMPLE + TIGHT

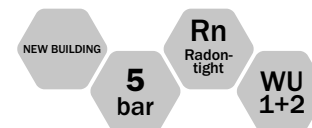

KRASO® Wall Collar

Installation instructions

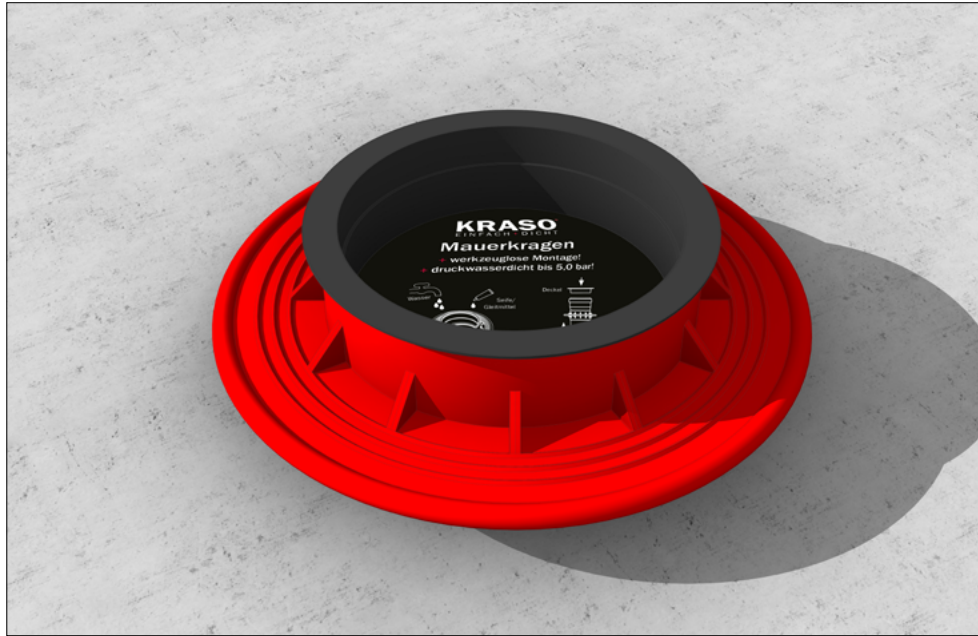

KRASO® Wall Collar

For water pressure tight connection of pipelines with a smooth surface (KG, KG 2000, HT) in waterproof concrete structures: base plate and wall, MPA-tested up to 5 bar

| DafStB waterproof concrete guideline: stress class 1 + 2

Installation situation shown: **KRASO® Wall Collar with KG pipe.**

1. Remove the **KRASO®** Cover. Moisten the **KRASO®** Wall Collar with water or soap / lubricant.
2. Slide the **KRASO®** Wall Collar onto the KG, KG 2000 or HT pipe.
3. Insert the KG, KG 2000 or HT pipe into the main pipe. Position the **KRASO®** Wall Collar in the middle of the component.
4. Insert support baskets and upper reinforcement. TEUF = top edge unfinished floor.
5. Concrete the component.
6. Clean the lip ring (if necessary).

