

... for more than 40 years +

All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •
Reproduction and distribution of the drawings as well as any other use require our written consent. •




KRASO GMBH & CO. KG
Baumannweg 1 | DE-46414 Rhede
T +49(0) 28 72 - 95 35 - 0
info@kraso.de | **KRASO.de**

6.1-MA.EN-v1.0-06.26-RSc.DK


KRASO®

SIMPLE + TIGHT

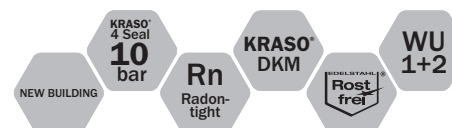

KRASO® Floor Penetration Type FBV-BDF

Installation instructions

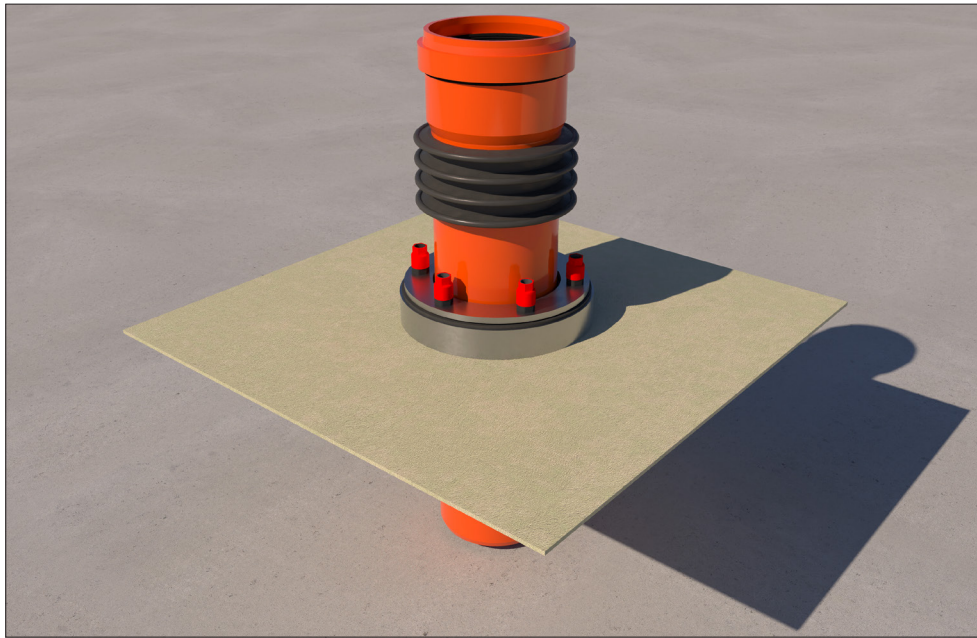

KRASO® Floor Penetration Type FBV-BDF

Floor penetration for a compliant integration of fresh concrete composite films (FBV)
| DafStB waterproof concrete guideline: stress class 1 + 2

1. Lay the main pipe.
2. Fill the pit, lay the insulation or pour the cleaning layer, taking care to leave a gap for the main pipe.
3. Lay FBV film.
4. Cut the FBV film in the area of the penetration.
5. If necessary: shorten the **KRASO®** Floor Penetration Type BDF.
6. Slide the **KRASO®** FBV Sealing Flange over the **KRASO®** Type BDF.
7. Insert the **KRASO®** Floor Penetration Type FBV-BDF into the main pipe.
8. Apply the fresh concrete composite film in accordance with the manufacturer's instructions.
9. Tighten the Torque Control Nuts **KRASO®** DKM crosswise step by step until it audibly "**CLICKS**".
10. Lay the reinforcement.
11. Insert the building period protective cover.
12. Concrete, if necessary remove the building period protective cover.

