

... for more than 40 years +

All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •
Reproduction and distribution of the drawings as well as any other use require our written consent. •





KRASO GMBH & CO. KG
Baumannweg 1 | DE-46414 Rhede
T +49(0) 28 72 - 95 35-0
info@kraso.de | **KRASO.de**

6.2-MA.EN-v1.0-06.26-RSc.DK

KRASO®

SIMPLE + TIGHT

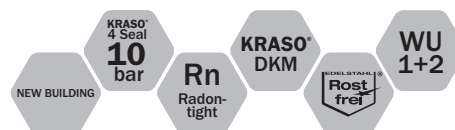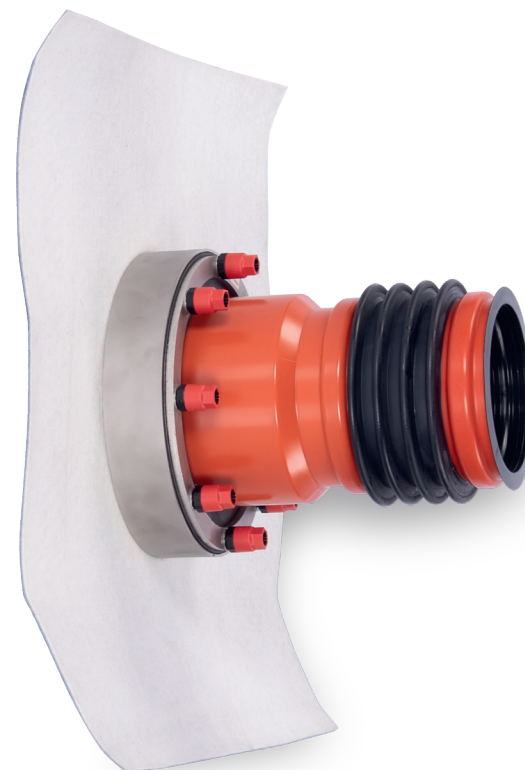

KRASO® Wall Penetration Type FBV-FR

Installation instructions



KRASO® Wall Penetration Type FBV-FR

Wall penetration for a compliant integration of fresh concrete composite films (FBV)
| DafStB waterproof concrete guideline: stress class 1 + 2

1. Fix the FBV film to the formwork.
2. Nail on the **KRASO®** Cover using a hammer. If necessary, remove any temporary protective film provided by the construction company. Ensure that the minimum overlap specified by the manufacturer is observed.*¹
3. Place the **KRASO®** Wall Penetration Type FBV-FR on the **KRASO®** Cover.
4. Slide the **KRASO®** FBV Sealing Flange over the KG pipe up to the formwork and apply the fresh concrete composite film in accordance with the manufacturer's instructions. Tighten the Torque Control Nuts **KRASO®** DKM crosswise step by step until it audibly "**CLICKS**".
5. Lay the reinforcement. Make sure the concrete covers the area of the penetration.
If necessary: fix the **KRASO®** Wall Penetration Type FBV-FR to the reinforcement.
Important: the wire must not be fixed to the **KRASO®** 4 Seal.
6. Formwork and ensure sufficient distance to the tie points.
7. Concrete wall. To avoid segregation in the area of the penetration, the free fall height of the concrete must not exceed 1 m.*²
8. Remove formwork.

