


... for more than 40 years +

**KRASO**<sup>®</sup>  
SIMPLE + TIGHT

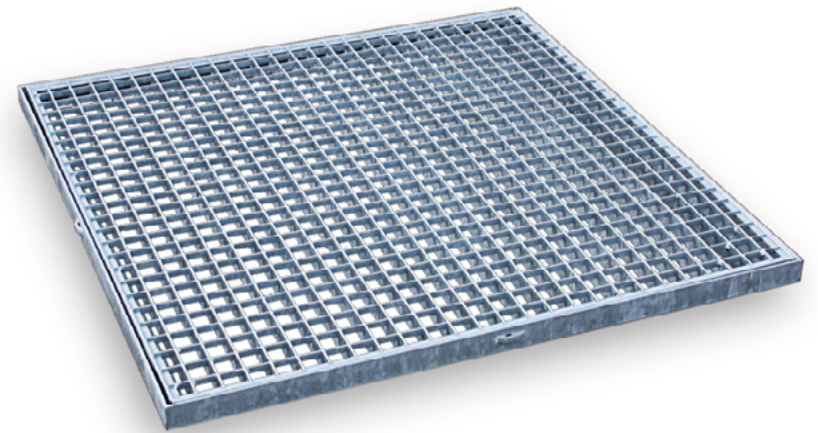

All rights to the drawings and designs are the property of KRASO GmbH & Co. KG. •  
Copying and distribution of the drawings as well as any other use require our written consent. •




**KRASO GMBH & CO. KG**  
Baumannweg 1 | DE-46414 Rhede  
T +49 (0) 28 72 - 95 35 - 0  
info@kraso.de | **KRASO.de**

7.8-MA.EN-v1.0-06.2-RSc.DK

NEW BUILDING

**KRASO<sup>®</sup> Grating Cover - walkable -**  
Installation instructions

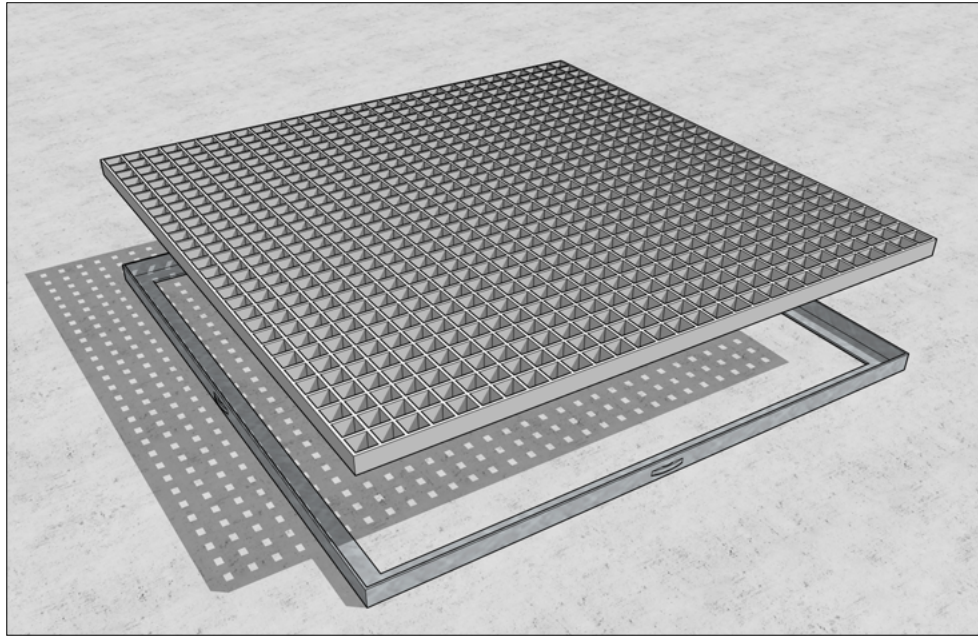

## KRASO® Grating Cover - walkable -

galvanised, walkable


### Installation situation points 1. to 6. for base plate without floor structure

1. Lay foil and reinforcement.
2. Fix the angle frame with double-headed nails or screw clamps. Top edge of angle frame = top edge finished floor (TEFF).
3. Depending on the design of the cover: note the connection variant.
4. Concrete.
5. Remove formwork after hardening of the concrete.
6. Install the grate cover.

### Installation situation points 7. to 12. for base plate with floor structure

- 7.\* Lay the insulation. The angle frame must be fully embedded in the screed.
8. Fix the angle frame with double-headed nails or screw clamps. Top edge of angle frame = top edge finished floor (TEFF).
9. Depending on the design of the cover: note the connection variant.
10. Apply screed.
11. Remove formwork after hardening of the screed.
12. Install the grate cover. Work on the finished floor.

### Installation situation points 1. to 6. for base plate without floor structure

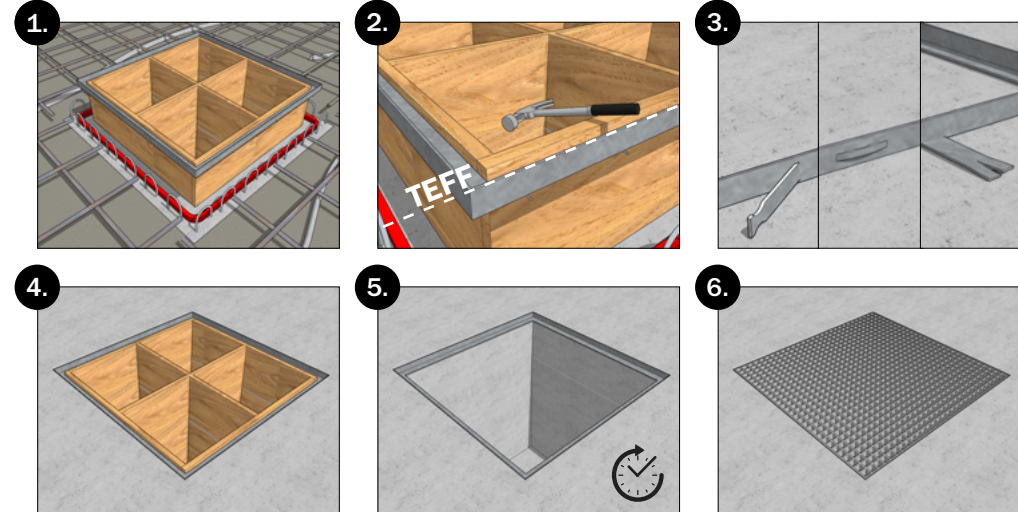

### Installation situation points 7. to 12. for base plate with floor structure

